

# Revo


Instrukcja montażu  
Assembly instruction  
Montageanleitung  
Instrukce k montáži  
Instruction du montage  
Инструкция по сборке




profim

SN150/SN210/SW120/SW180/SW240

1

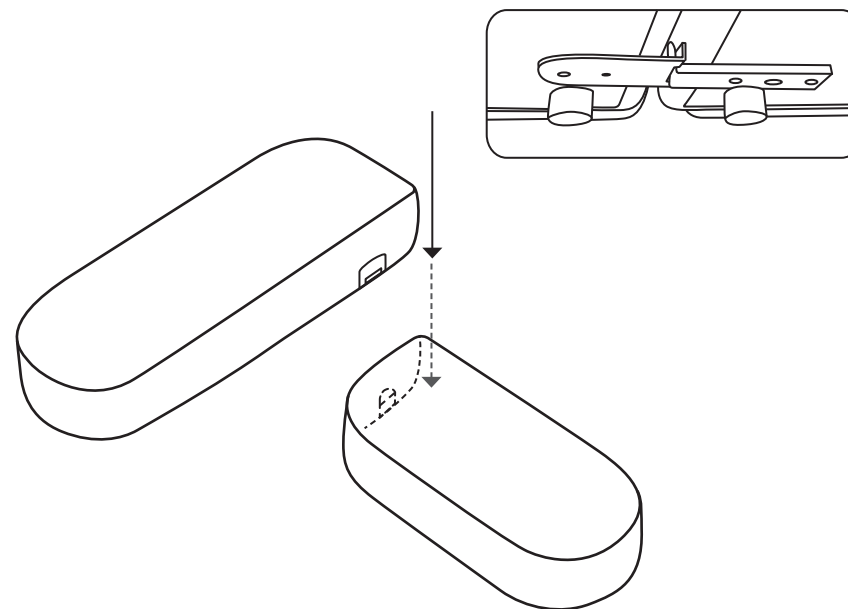


2

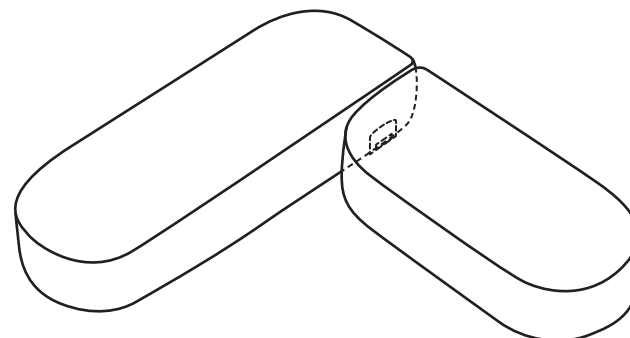


B90/B120/B180


1

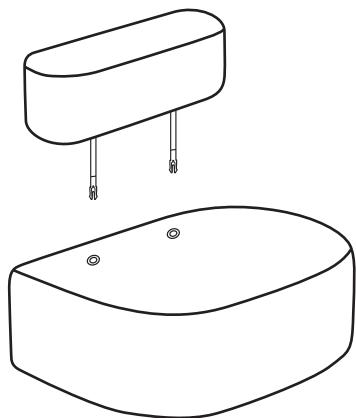

2

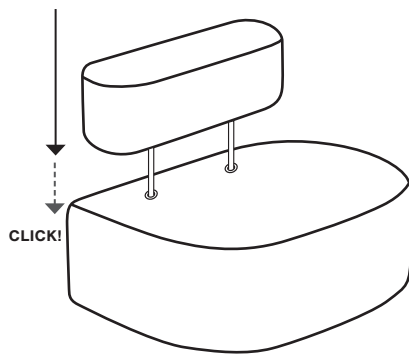


3

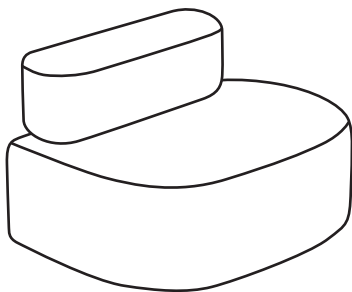


W90/W120/W180

1

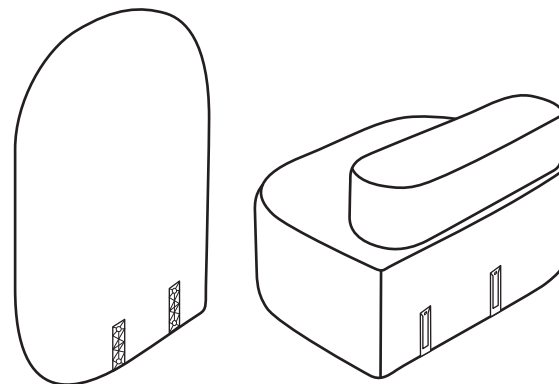

2

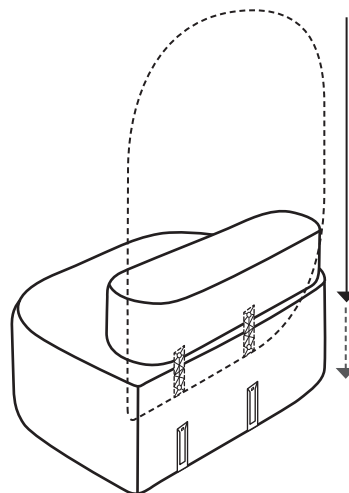

3

