

profim

Instrukcja montażu


Assembly instruction - Vancouver Lite (walls)

Montageanleitung - Vancouver Lite (Trennwände)

Instrukce k montáži - Vancouver Lite (paravany)


Instruction du montage - Vancouver Lite (séparateurs)

Инструкция по сборке - Vancouver Lite (перегородки)

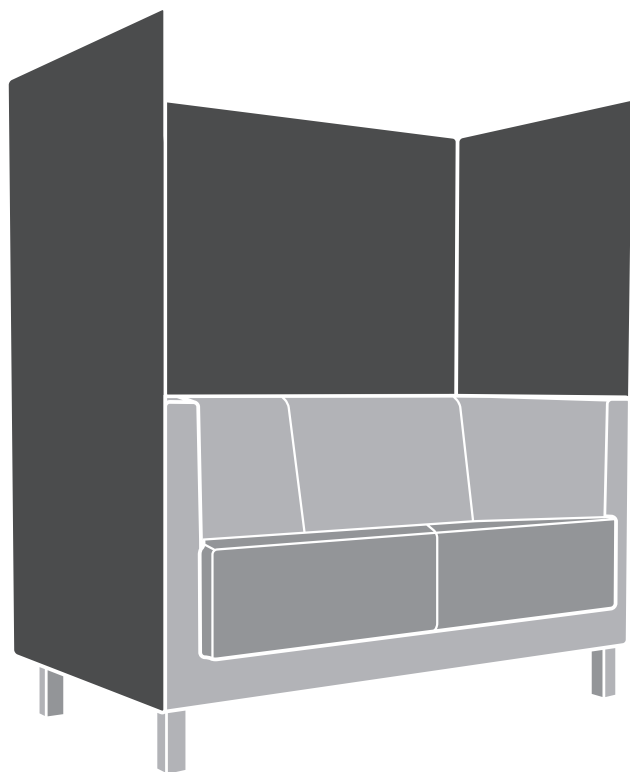


Vancouver Lite (ścianki)


1

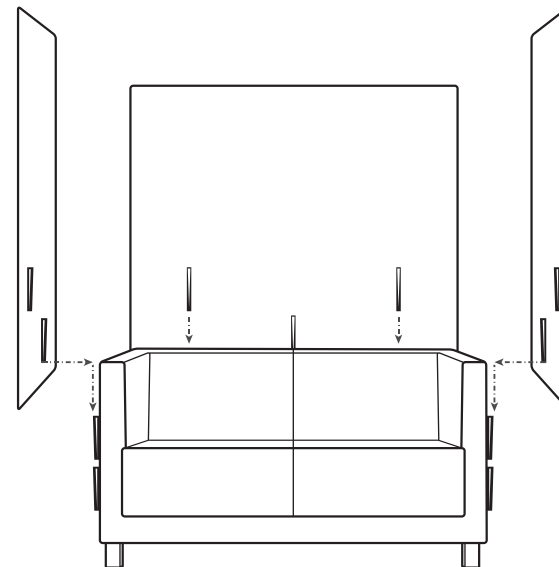

Zestaw sof w kształcie litery „U”
Set of „U-shape” sofas
Satzes Sofas in der Form des Buchstaben „U”
Sestav pohovek ve tvaru „U”
Composition des canapés en „U”
Комплекта диванов образного „U”

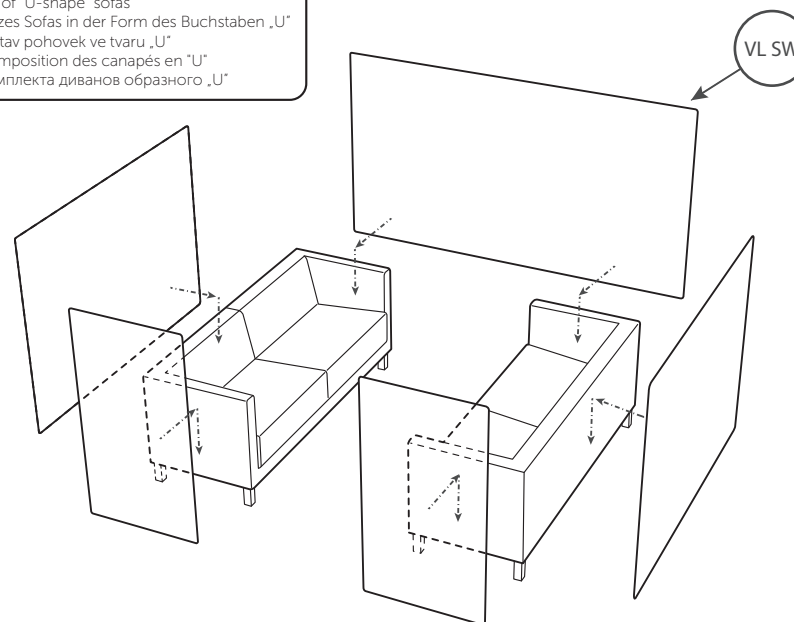

2

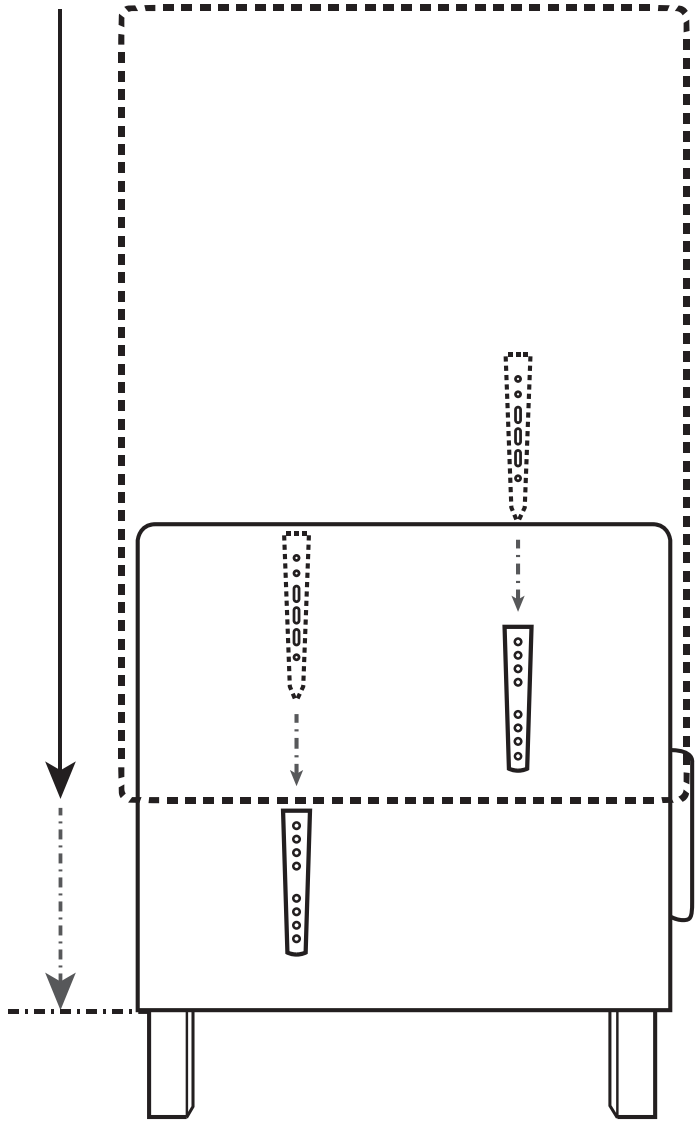

3

